


SECTION VIEW

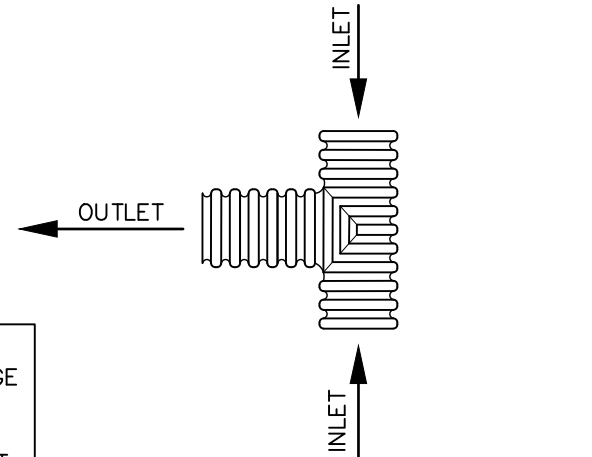

T-SECTION  
PLAN VIEW

- NOTES:**
1. TEMPORARY DIVERSION: GENERALLY, USE AN EARTHEN DIVERSION WITH A DIKE RIDGE TO DIRECT SURFACE RUNOFF INTO THE TEMPORARY SLOPE DRAIN. MAKE THE HEIGHT OF THE RIDGE OVER THE DRAIN CONDUIT A MINIMUM OF 1.5 FEET AND AT LEAST 6 INCHES HIGHER THAN THE ADJOINING RIDGE ON EITHER SIDE. THE LOWEST POINT OF THE DIVERSION RIDGE SHOULD BE A MINIMUM OF 1 FOOT ABOVE THE TOP OF THE DRAIN SO THAT DESIGN FLOW CAN FREELY ENTER THE PIPE.
  2. OUTLET PROTECTION: PROTECT THE OUTLET OF THE SLOPE DRAIN FROM EROSION.
  3. MINIMUM OF 10 INCH PIPE OR GREATER BASED ON AREA OF DRAINAGE.



EFFECTIVE: 01/05/17

**STANDARD TEMPORARY SLOPE DRAIN**

DETAIL No.  
04000.24  
SHEET 1 OF 1