


NOTES:

1. TRANSVERSE EXPANSION JOINTS TO BE A MAXIMUM OF 50 FEET.
2. ALL CONCRETE TO BE FINISHED WITH CURING COMPOUND.
3. A 6 INCH DEPTH IS REQUIRED.
4. SAW CUT JOINTS EVERY 10 FEET OR WIDTH.
5. NO UTILITY SURFACE COVERS/PLATES/MANHOLES (i.e. WATERLINE VALVE COVERS, ETC.) SHALL BE LOCATED WITHIN TRAIL AND SHALL BE MINIMUM 2 FEET FROM THE EDGE OF TRAIL.
6. ALL TRAILS SHALL BE LOCATED MINIMUM 5 FEET FROM THE BACK OF CURB.

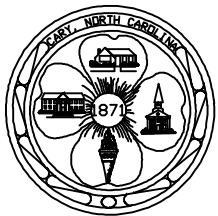

EFFECTIVE: 12/10/09

STANDARD CONCRETE MULTI-USE PATH

DETAIL No.

03000.08

SHEET 1 OF 1