


NOTES:

- 1) PRESSURE TREATED No. 1 SOUTHERN PINE.
- 2) ALL BOLTS SHALL BE RECESSED. USE GALVANIZED 5/16" LAG BOLTS FOR 2x6 TO 4x4 CONNECTIONS, AND 1/4" GALVANIZED LAG BOLTS FOR ALL OTHERS.
- 3) STAIN WITH ONE COAT OF TWP CALIFORNIA CEDAR.

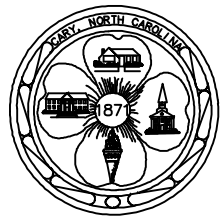

EFFECTIVE: 12/10/09

STANDARD WOODEN SAFETY RAILING

DETAIL No.

09000.04
SHEET 1 OF 1